


LED HIGHBAY

Installation Instruction

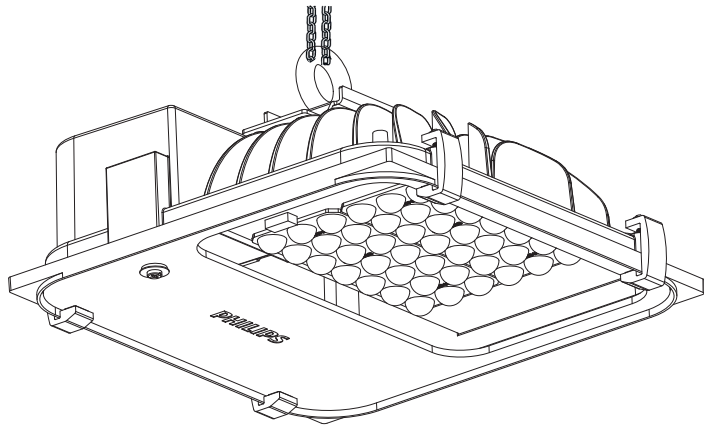

TYPE	: BY225P
LAMP	: LED
VOLTAGE	: 240 V, 50 Hz
IP CLASSIFICATION	: IP 66
NET WEIGHT	: 4.0 Kg.
MAX. PROJECTED AREA	: 0.08 m ²
CCT	: 6500 K
APPLICATION	: LED HIGHBAY



IP-66

Ta-45




Dimensions


Indoor Luminaire

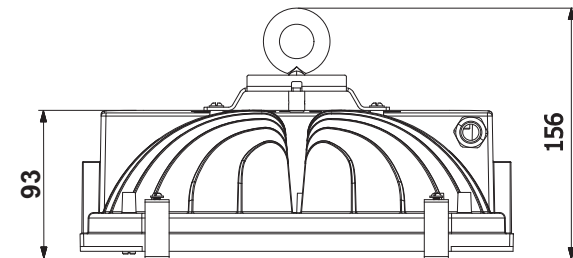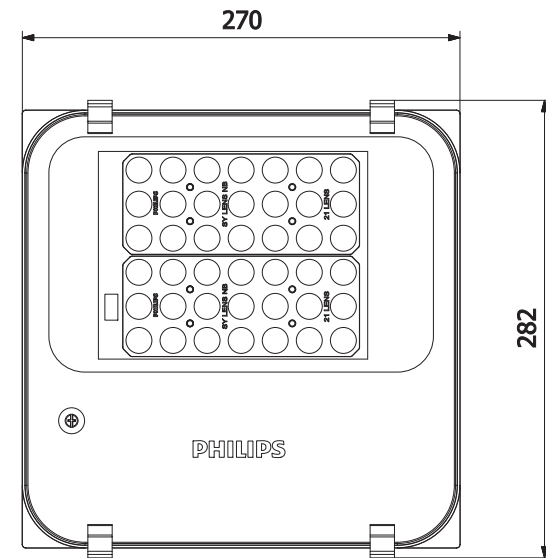

- 1 Take the luminaire out of the packing box.

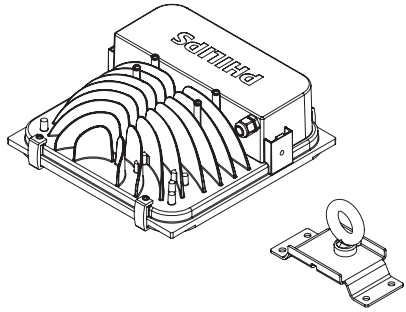


- 2 Open four screws of Housing assembly with screw driver and assemble mounting bracket assembly with Housing assembly.

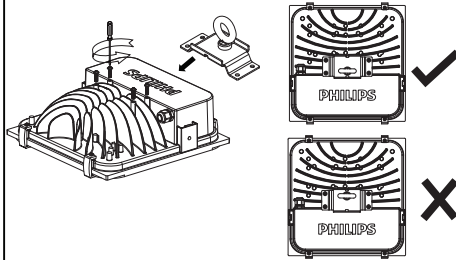


Note: Ensure the bracket is assembled in right direction for proper balancing


- 7 For additional safety, use safety chain (not part of luminaire) with M6 screw

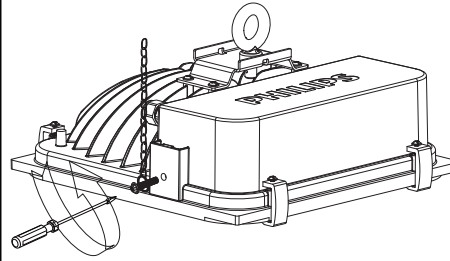


- 3 Follow the below mention sequence for assembly of Mounting bracket with four M5 screws, Spring washer and flat SS washer.

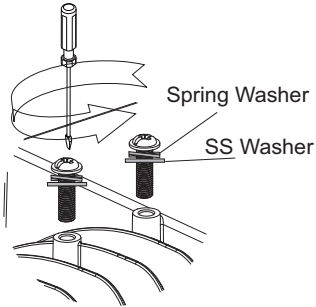


- 4 Hang the luminaire by 2 point suspension (recommended) for proper alignment (hooks not part of offering).

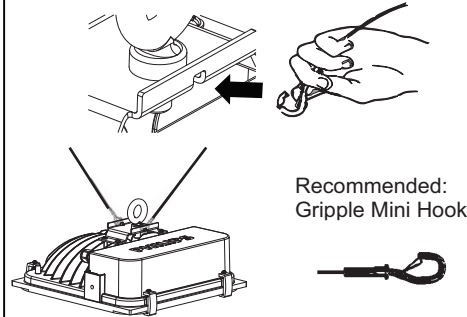

- 5 Hang luminaire by suitable means through Eye bolt.

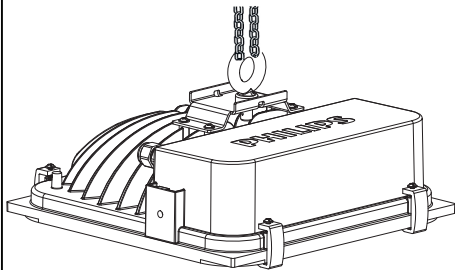

- 6 For External wire connection use IP66 Box (not part of Luminaire)

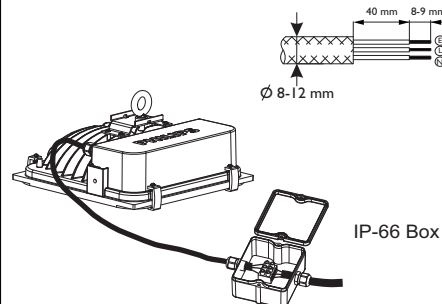

⚠ Notice: Correct connection for polarities

CAUTION

1. Ensure L-N-E is connected in right manner.
2. Ensure 3 core CABLE for Connections(Outer diameter 8-12mm, multi strand 1.2 sq. mm thickness) with IP-66 protected cable joint.
3. 3 Core cable should be properly connected with ground.
4. Ensure mounting bracket assembly to be fix by four M5 screws at 10-12 N-m torque.
5. Ensure luminaire mounting is done properly with specified load(safety issue)
6. Product should be operated between 140-270V a.c.
7. Use Surge protection (up to 10kV) to protect against surges. Use Type B+C surge type SPD in distribution box to arrest switching and lighting surges
8. Luminaire must be brought down from the mounting position for maintenance.
9. In case the front glass is found broken/damaged it should not be powered on and is to be replaced before using the luminaire.
10. The light source of this luminaire is not replaceable, when the light source reaches its end of life the whole luminaire shall be replaced.

FAILURE OF PRODUCT DUE TO NON COMPLIANCE TO ANY OF THE ABOVE, VOIDS WARRANTY OF PRODUCT